


ELECTRICAL INSTALLATION 3 PHASE DINO + EXTERNAL CONTROL

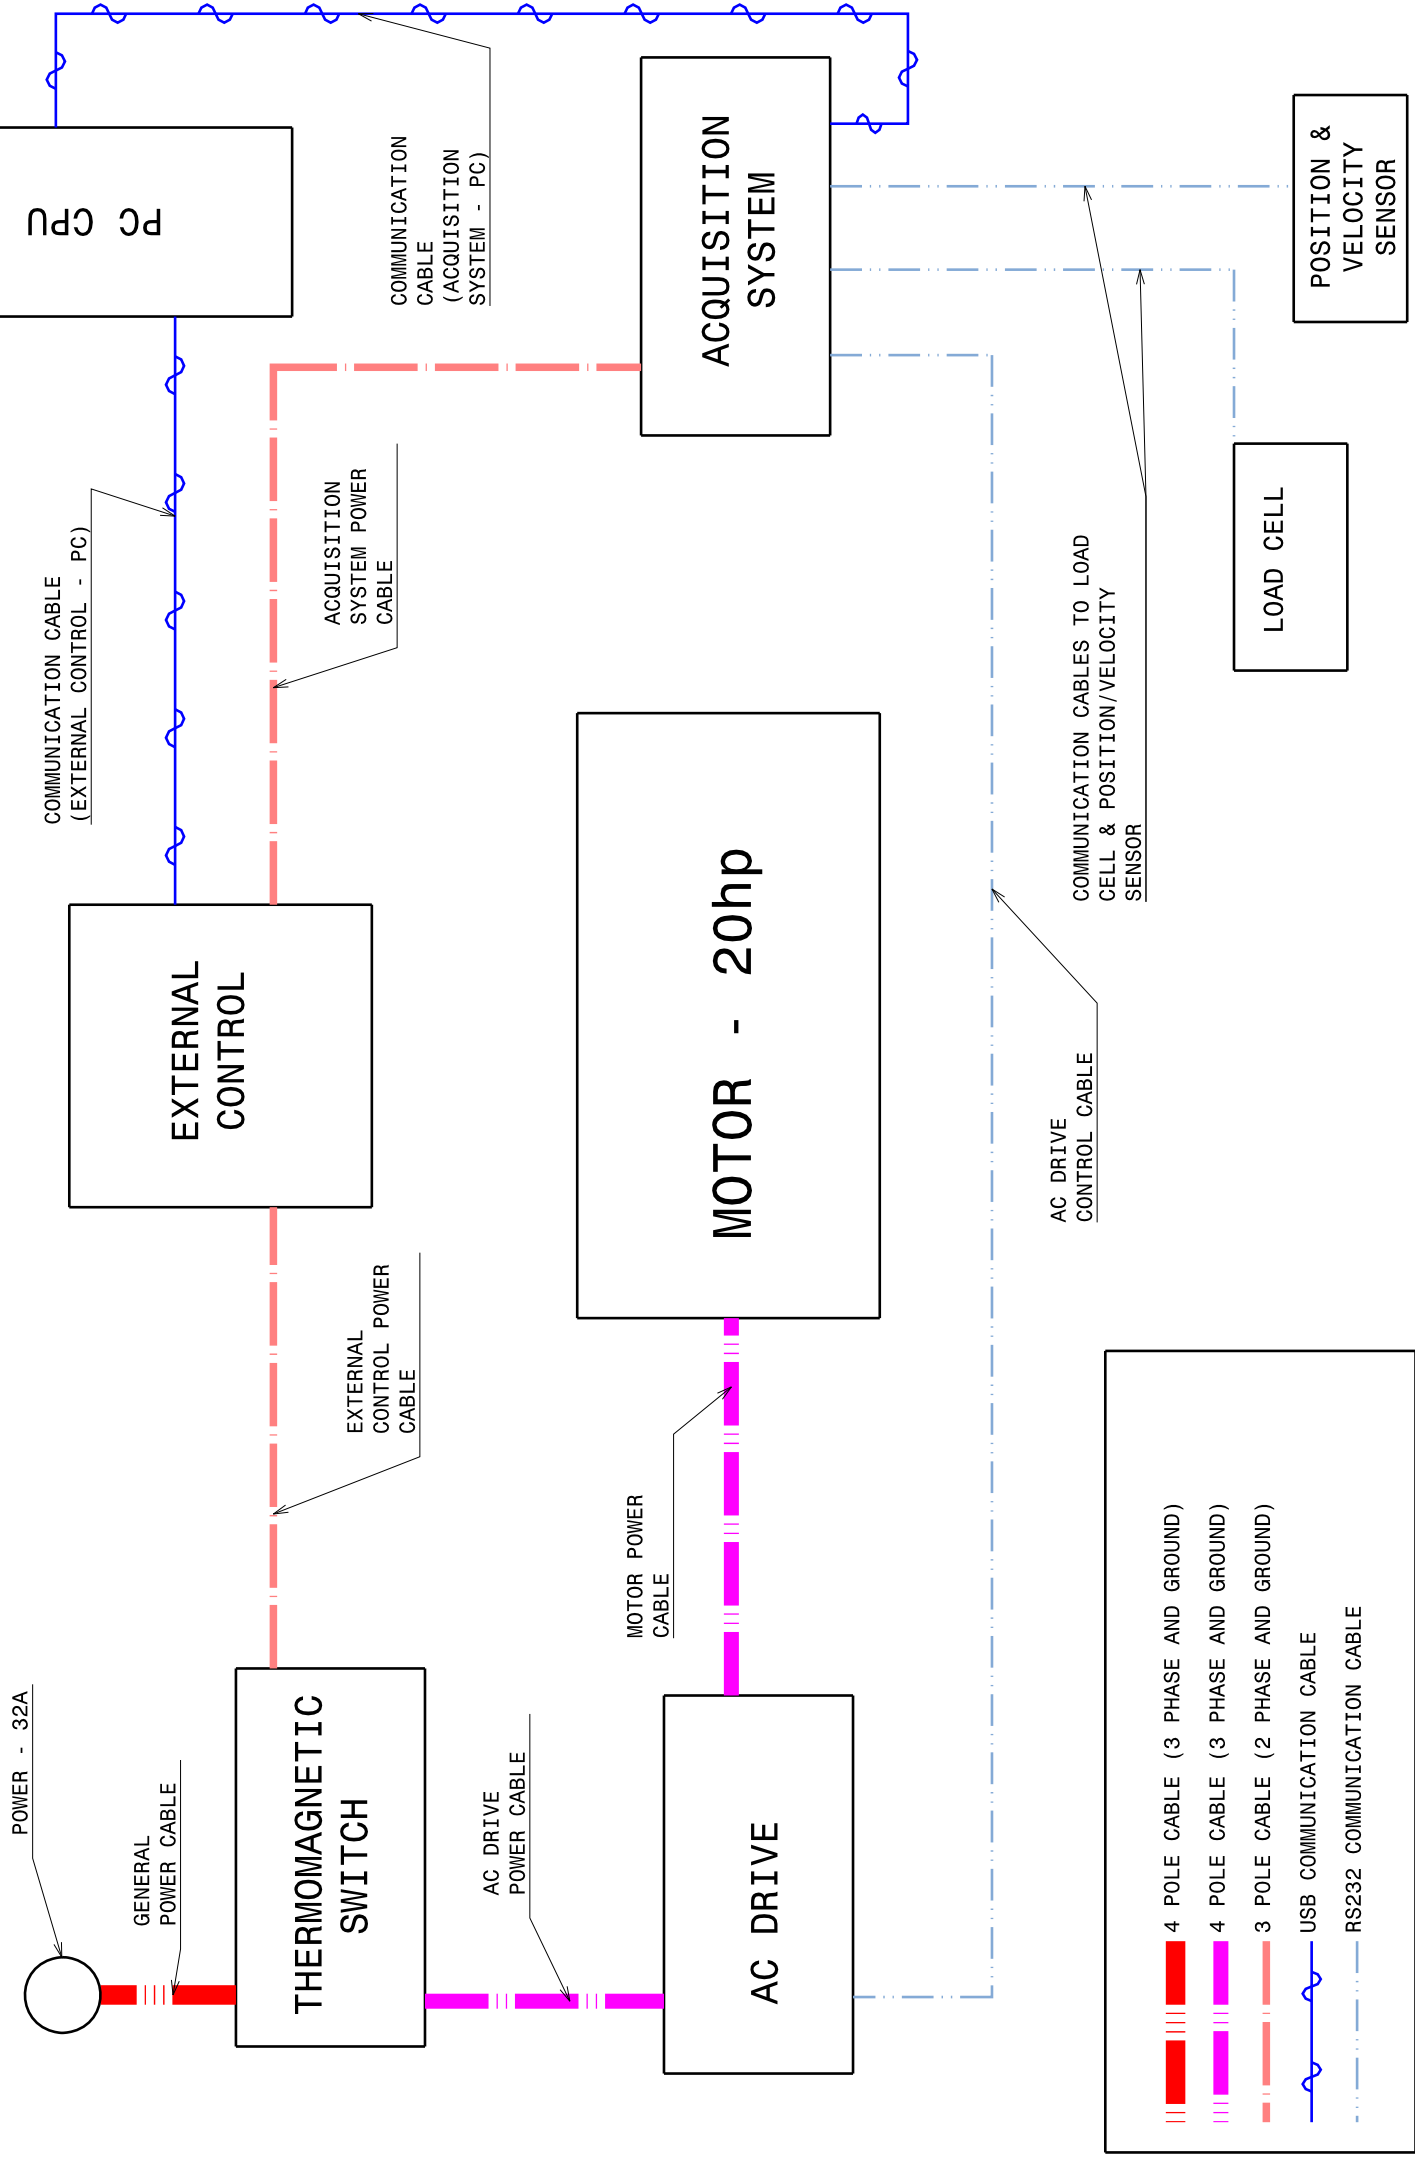

	4 POLE CABLE (3 PHASE AND GROUND)
	4 POLE CABLE (3 PHASE AND GROUND)
	3 POLE CABLE (2 PHASE AND GROUND)
	USB COMMUNICATION CABLE
	RS232 COMMUNICATION CABLE