


## Stroke change procedure Dino 55-762 and Dino 6-762

### 1- Remove top cover



You need: 4mm Allen key.

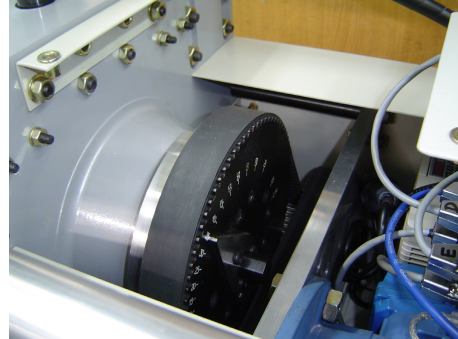

### 2- Unclamp cone system

You need:

- 10 mm Allen key
- ¾" Open-End Wrench

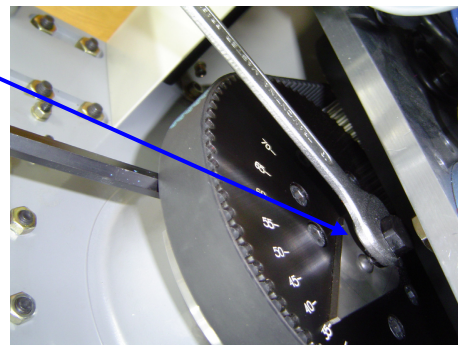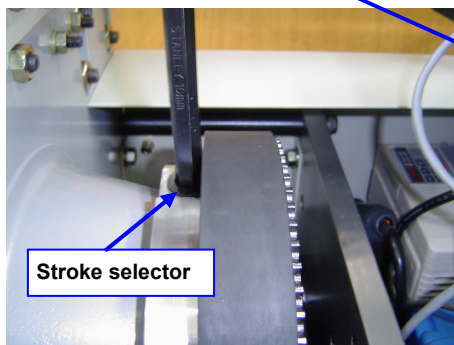

- a) Introduce the 10mm Allen key in the Stroke selector.
- b) Hold the 10mm Allen key and turn counter clockwise the ¾" Open-End Wrench key until the cones are unclamped (almost 1 turn).



Clockwise →



- c) Turn the stroke selector in order to set the mark at the desired stroke (turning clockwise the stroke decreases and counter clockwise increases).
- d) Now, clamp the cones again. For this: Hold the 10mm Allen key and turn clockwise the ¾" Open-End Wrench key until the cones are clamped. The fixing torque should be 30/35 pound foot (4/5 Kgm). This is very important; in order to clamp properly the cones, otherwise damage on the equipment may be produced.